



User manual for Earphone

Table of contents	1
Caution	2
Important safety instructions	2
Safety and handling information	2
Danger	2
Warning	2
Lithium-Ion battery warnings	3
Location of parts and controls	3
Set up for charging the battery	4
Pairing Bluetooth devices	4
Pairing mode	4
Function mode and LED display	4
Compatibility	5
Troubles shooting	5
One (1) Year Limited Warranty	6

1

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

Safety and Handling Information

For maximum product life, do not drop, throw, or crush the headset. Do not expose it to humidity, dust, or operating temperatures outside 32°F to 113°F (0°C to 45°C). Avoid charging it in temperatures above 113°F (45°C).

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for a unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.

2


6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by its cord or use the cord as a handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when the unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the outlet by pulling the power cord.
15. Do not use this product while driving.
16. Check the laws and regulations on the use of mobile phones and hands free equipment in the areas where you drive. Always give full attention to driving and pull off the road and park before making or answering a call.

Lithium-ion battery warnings

This device contains a non-removable lithium-ion battery. The battery must be recycled or disposed of properly.

Location of parts and controls

1. [Play/Pause] = Play & Pause
2. [Volume Up] = button
3. [Volume Down] = button
4. [Voice] = Voice function on/off button
5. R=Right ear bud
6. L=Left ear bud
7. USB port for charging

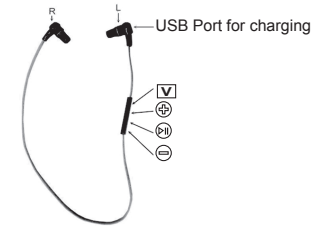

3

Set up for charging the Battery

Note: Before first use, the battery must be fully charged (3 to 4 hours).

1. Insert the USB adapter's mini USB connection into the headset's USB port.
2. Plug the USB adapter into your computer's USB port or wall outlet.
3. Red LED will be illuminated when charging while LED will be off once fully charged (charge time 3 to 4 hours on a depleted battery).

Pairing Bluetooth Devices

Pair your Bluetooth device to the headset when you turn the headset on for the first time.

The headset pairs with devices that use the Bluetooth Hands Free Profile (HFP) and/or the Advanced Audio Distribution Profile (A2DP). HFP enables hands-free communication and the A2DP dictates how audio is streamed from one device to another over a Bluetooth connection.

When you pair devices to the headset, the devices operate according to their protocols. For example, when you pair a smart phone to the headset, it handles calls and plays music since it has both the H2P and A2DP protocols. MP3 players with Bluetooth and A2DP only play music and cell phones (not smart phones) only handle calls.

Pairing Mode

1. Press and hold the power button ([Power]) of earphone for 4 seconds to start pairing, blue and red LEDs will be flashing with 0.2s frequency.
2. Prepare your Bluetooth device (mobile phone or music player) to pair.
3. Select the Searching mode on your Bluetooth device (refer to your Bluetooth device's owner's manual for details if necessary).
4. Your Bluetooth device should find "Monoprice Earphones"; select it and, if prompted, use 0000 as a pin for a pairing code.
5. Verify that you are connected to the "Monoprice Earphones". Pairing is completed when LED(s) are not illuminated.

Function mode and LED display

To....	Do this...	LED status
To power on	Press and hold [Power] for 2 seconds	Flashing blue 4 times
For Initial set-up and pairing	Press and hold [Power] for 4 seconds	Flashing blue and red until pairing completed
To power off	Press and hold [Power] for 4 seconds	Flashing red twice
Back to default setting	Press and hold [Volume Up] and [Volume Down] for 4 seconds	

4

To....	Do this...	LED status
To increase volume	Press [Volume Up] one time	Flashing blue
To decrease volume	Press [Volume Down] one time	Flashing blue
To play next song	Press and hold [Volume Up] for 2 seconds	Flashing blue
To play previous song	Press and hold [Volume Down] for 2 times	Flashing blue
To pause/play	Press [Play/Pause]	Flashing blue
To answer an incoming call	Press [Play/Pause]	Flashing blue and red
To reject an incoming call	Press and hold [Play/Pause] for 2 seconds	Flashing blue
To end a call	Press [Play/Pause]	Flashing blue off
To switch on/off voice Function	Press and hold [Voice] for 4 seconds	Flashing blue twice
To select language	Press and hold [Voice] for 2 seconds	Flashing blue twice
To select desired language	Press [Play/Pause]	Flashing blue twice

Compatibility

The MONOPRICE Bluetooth earphones are design for iPhone, Android smart phone, tablet or PC with Bluetooth 3.0 or above device.

Troubles shooting

Issue	Solution
Disconnection due to Out of Range.	Move back into connection range and turn the headset off and back on to reconnect to your Bluetooth device. Note: The headset automatically syncs to the last device connected. If you need to reconnect to the first device that was connected, reconnect it manually.
Sound is not clear or there is no sound at all.	1. Turn the headset off and then back on. 2. Turn off your music device's equalizer. 3. Check the headset or Bluetooth device volume level.
Music won't play on the headset..	1. Make sure your Bluetooth device has A2DP. Check if both devices are connected 2. Turn the headset off and then back on to auto connect with your Bluetooth device.

5

The headset volume controls are not working.	Change the volume from your Bluetooth device.
No LEDs illuminating and no power.	1. Make sure the headset's POWER is turned on. 2. Make sure the headset is charged.
Sound is too low/too much distortion.	1. Adjust the speaker or Bluetooth device volume level. 2. Turn off your Bluetooth device's equalizer.
Phone call not answered by speaker.	1. Make sure your cell phone has HFP. 2. Verify that both devices are connected. 3. Restart the speaker to auto-connect with your Bluetooth device.
Music doesn't play after hanging up a call.	Press to resume music.
Speaker doesn't control the music.	Make sure your Bluetooth device has AVRCP

One (1) Year Limited Warranty

This device warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, We will either

- 1) Repair the defect at no charge, using new or refurbished replacement parts, or
 - 2) Replace the product with a new product that is at least functionally equivalent to the original product, or
- A replacement product or part, including a user-installable part installed in accordance with instructions provided, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes our Audio's property.

Obtaining Service: To obtain warranty service, mail..... Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

6