

STEP 1 to Enter Program Mode:

Type: *3001#12345<STO>00 Phone Responds: STORE NOT DONE

STEP 2 to Program the User's Phone Number:

Press: <RCL> 0 2 Phone Responds: 1111111111
(or previously programmed #)

Press and HOLD: <CLR> until display is empty

Type: cellular phone number and <STO> 02 Phone Responds:
REPLACE CONTENTS? For example: 8173905555 <STO> 02

Press: <STO> Phone Responds: STORED


STEP 3 to Enter Carrier Parameters:

Type: <RCL> 0 3 Phone Responds: 38*1*1*334*15*15
(or previously programmed parameters)

Press and HOLD: <CLR> until display is empty

Type: cellular phone paramemters and <STO> 03

For example: 00038*1*1*334*05*10 <STO> 03

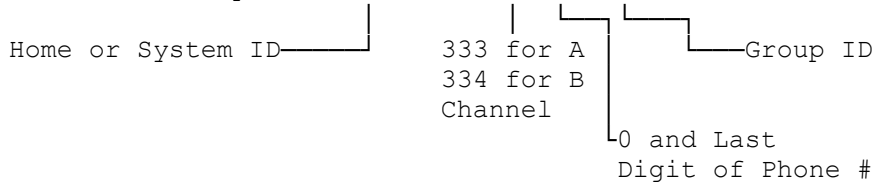

Phone Responds: REPLACE CONTENTS?

Press: <STO>

STEP 4 to Enter Lock Code Parameters

Type: <RCL>01 Phone May Respond: 911#*911#0*1234

Press and HOLD: <CLR> until display is empty

Type: 911#*911#0*

Type: 4 digit lock code (1234 is the default)

Type: <STO>01 Phone Responds: REPLACE CONTENTS?

Press: <STO>

You are DONE. The phone must be turned off and then on again before it will recognize the new parameters. Always wait at least two hours after receiving the cellular phone number from the carrier before testing the phone.

Settings List:

<MENU> 0 Lock Phone
<MENU> 1 Change Carrier Priority (A/B)
<MENU> 2 Display Last # Dialed
<MENU> 3 Call Timers
<MENU> 4 Turn ON/OFF Display Light
<MENU> 5 Enable/Disable Key Tone
<MENU> 6 Ring Volume
<MENU> 7 Primary/Secondary NAM select
<MENU> 8 Send DTMF Tones

Accessories:

17-615 Rapid Battery Charger
17-608 Additional Battery
17-616 12V Cigarette Lighter
Adapter/Charger