

2. Insert the SIMM edge connector at a 75-degree angle onto the socket.

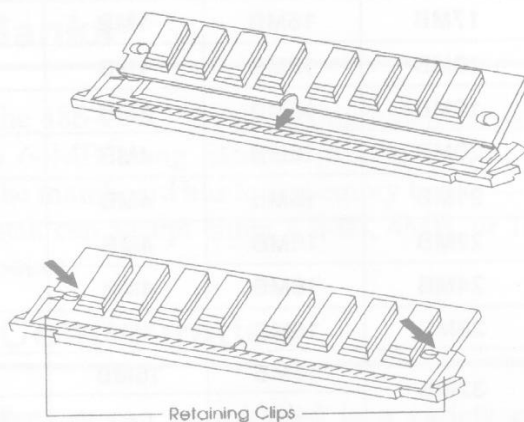


Figure 3-2. Installing SIMMs

3. Carefully push the SIMM down and back into the socket until the retaining clips of the socket snap, holding the SIMM in place. The holes in the SIMM should match the pins on the socket's retaining clips.

To remove the SIMM/s, pull the retaining latch on both ends of the socket and reverse the procedure above.

---

## Cache Memory

---

The 486-GAC-V can accept cache memory of 64, 128 or 256KB.

→ **NOTE :** Be sure to use the correct chips for the amount of cache memory you want to add. You must install both the correct Cache and Tag SRAM.  
Alter RAM type is always the same as Tag RAM.

---

## Installing Cache Memory

---

→ **NOTE :** Always observe static electricity precautions. See "Handling Precautions" at the beginning of this manual.